



This **Quick Start Guide** explains how to use the main DZM functions. Your DZM Operation Manual provides more comprehensive configuration and usage instructions.

1 Switching the DZM on and off

If the 'Auto Power On' feature is enabled: The DZM will automatically switch on when aircraft power is turned on and switch off when aircraft power is turned off.

If the 'Auto Power On' feature is disabled:

- > To switch on, press and hold the POWER key until the display lights up.
- > To switch off, press and hold the POWER key until the progress bar reaches the end and the display goes blank.



2 Making a voice call on the Iridium satellite network

To dial a call manually:

- > Press DIAL SAT.
- > Enter the number to be dialed: press and hold the 0 key for the international dialing prefix +, followed by country code, area code and number.
- > Press ENTER/CONNECT.



To call using DZM Quick Dial keys: The Quick Dial function enables you to call the first nine numbers saved in the DZM phonebook.

- > Press SPD SAT.
- > Press the 1-9 keys for the number required or 0 for the last dialed number.
- > Press ENTER/CONNECT.



To call a number stored in the DZM phonebook:

- > Press MENU.
- > Use the DOWN arrow key to scroll to the phonebook option. Press ENTER to select and open the phonebook directory.
- > Use the UP and DOWN arrow keys to scroll to the number to be called. Press ENTER to select.
- > Select DIAL VIA SAT. Press ENTER to connect.



To end a call: Press CANCEL.

Using touch-tone (DTMF) dialing during a call:

- > When the display shows "Press Enter for DTMF", press ENTER.
- > Press the 0-9 keys as required, press CANCEL for * or press and hold CANCEL for #.
- > Press ENTER to exit DTMF mode.





3 Answering an incoming a voice call

Your headset rings and the DZM display flashes when an incoming call is received.

To answer a call: Press ENTER.

To reject or end a call: Press CANCEL.



4 Sending position reports and alerts

To send a manual position report (Point of Interest): Press MARK to send current GPS position.

To send an alert report indicating you may need support: Press and hold ALERT for 1.5 seconds. When the DZM display flashes "Alert Mode", Alert reports are sent at pre-programmed intervals.

To send distress reports: Press and hold DISTRESS key for 1.5 seconds. When the DZM display flashes "Distress Mode", distress reports are sent at pre-programmed intervals.

To cancel alert or distress reports: Press and hold ALERT or DISTRESS for 1.5 seconds until the display no longer flashes.



5 Reading an incoming text message

The DZM display flashes and displays the message.

Press CANCEL to close the message.

To read a stored message:

- > Press MENU and use the DOWN arrow key to scroll to "Received Messages".
- > Press ENTER to open the list of messages.
- > Use the UP and DOWN arrow keys to scroll to the required message. Press ENTER to open the selected message.

To exit the message screen: Press CANCEL.



6 Isolating (muting) a phone call

Isolation prevents audio output to the phone and reduces incoming audio volume.

To isolate a phone call: Press and hold ISO PH. The display will show "Cell/Sat Isolated".

To cancel isolation: Press and hold ISO PH until the display no longer shows "Sat Isolated".



7 Muting auxiliary audio

To mute auxiliary audio input (such as music): Press AUX MUTE. The display will show "Auxiliary Input Muted".

To cancel mute: Press AUX MUTE again.

